

Breakoutboard / F

3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
BN	BN					WS	GN			BL			BN	GN	WS
						WS	GN			BL			BN	GN	WS
Ai	EI														GE
le	ev														GE
ro	at														
n	or														

Analog Side

Digital Side